


Ford Transit - Rear Drums & Judder (5 & 6 stud applications)

Important notice re: correct fitment and securing of Ford Transit drums.

If the correct sequence is not followed, it may cause a distortion in the drum, which will lead to judder.

- Carry out drum fitment according to best practice, including cleaning of the hub
- Mount the wheel and finger tighten the wheel nuts – do not over tighten
- Now gradually tighten the nuts in the diagonal sequence as shown below and finally to the correct torque settings. 5 stud > 100Nm 6 stud > 180Nm

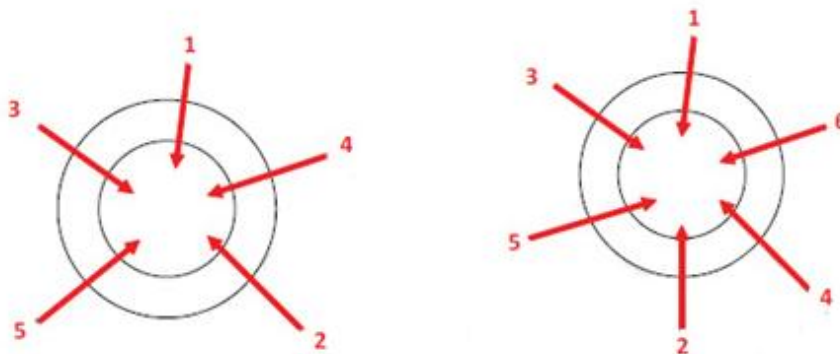

Warning! If the above sequence is not followed, the drum may distort!

